



MEDIFY AIR



# MA-112<sup>V2.0</sup> AIRPURIFIER

READ AND FOLLOW THESE INSTRUCTIONS  
USE UNIT ACCORDING TO INSTRUCTIONS PROVIDED IN THIS MANUAL

**KEEP MANUAL FOR FUTURE REFERENCE**

MA-112-2.0/US  
Rev: 04/28/23

# IMPORTANT SAFETY INSTRUCTIONS:

IN ORDER TO AVOID ANY DAMAGE TO YOU, OTHERS OR PROPERTY, FOLLOW THE FOLLOWING SAFETY PRECAUTIONS:

**IF THE POWER CORD OR UNIT DOES NOT WORK, CONTACT MEDIFY CUSTOMER SERVICE IMMEDIATELY.**

READ ALL INSTRUCTIONS BEFORE USING.

**WARNING** — TO REDUCE THE RISK OF BURNS, FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS:

- DO NOT touch the power plug with wet hands.
- Turn off the power before cleaning this machine.
- DO NOT use the air purifier in rooms where fumigation or pesticide is being used.
- Keep machine dry.
- Only use a soft clean cloth to clean this machine. DO NOT use solvents like Benzene, Alcohol or any flammable cleaners to clean the air purifier.
- Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 120v unit with a 120v power supply. You can break or ruin the circuit boards if you plug a 120v plug into a 220v power supply.
- Do not use air purifier in a room that oils or grease are being cooking; that may clog the filters.
- BEFORE USING THIS PRODUCT, PLEASE MAKE SURE TO REMOVE THE PLASTIC COVERING FROM ALL FILTERS.
- Turn off the power immediately in case of any of the following:
  - Malfunction of any switch
  - Circuit failure
  - Abnormal heating of wires or plugs
  - Any other malfunction

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any type of hazard. This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance of the unit shall not be made by children without supervision. Prior to cleaning or doing any type of maintenance, the appliance must be disconnected from the power supply.

**SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.**

# FILTER PURIFICATION

## 1. PRE FILTER


Removes hair, fibers, and large particles like dander.

## 2. TRUE HEPA H13 FILTER

The high-efficiency H13 TRUE HEPA filter is tested to removed 99.7% of particles down to 0.1 microns. This higher grade of HEPA filter easily catches pollen, dust mites, and other tiny airborne particles you can't see.

## 3. ACTIVATED CARBON FILTER

Substantial carbon filter with carbon pellets remove odors, and smoke.

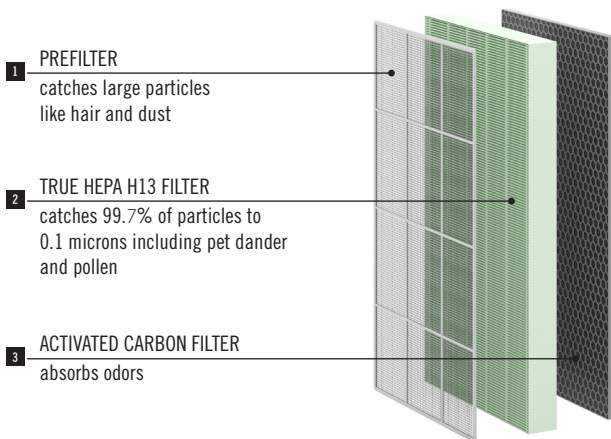

To purchase genuine Medify replacement filters, visit [www.medifyair.com](http://www.medifyair.com).


## TECHNICAL DATA

- Voltage: 120V AC 60Hz
- Power Rating: 95W
- Noise level: Max 45.6 dBA
- Unit dimensions: 28.3"H x 15.7"W x 15.4"D
- Unit weight: 32.8 lbs.
- EPA EST. NO.:99452-CHN-1

## STANDARD COVERAGE


Up to 1,000 sf every 15 minutes and up to 2,000 sf every 30 minutes.

Clean Air Delivery Rate		
Smoke	Pollen	Dust
1,019 m <sup>3</sup> /h (600 CFM)	765 m <sup>3</sup> /h (450 CFM)	1,019 m <sup>3</sup> /h (600 CFM)

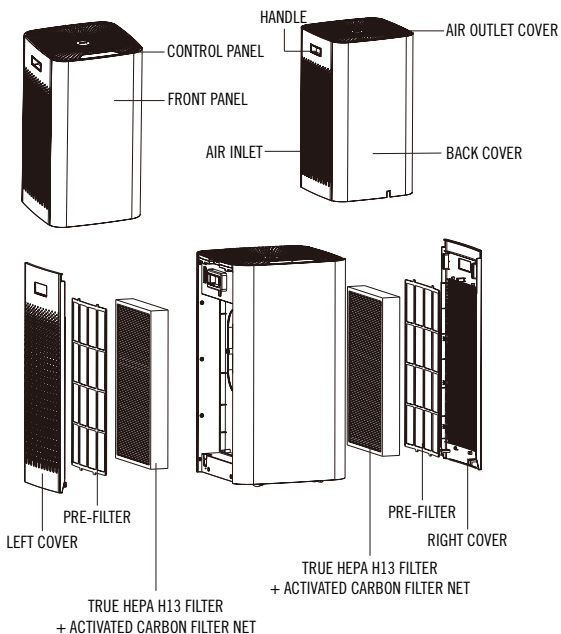


# BEFORE USE

## DISASSEMBLY AND INSTALLATION METHODS OF SIDE COVERS

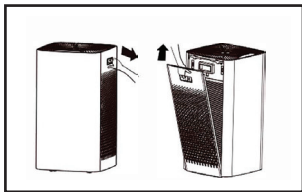


1. Press down on the handles on the sides to remove the side covers. After they open, lift the cover out from the bottom fixed grooves.

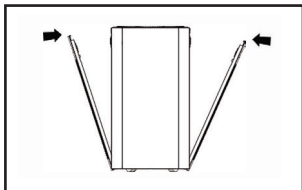

2. To reinstall side covers, align at fixed grooves and insert covers into grooves. Covers will snap back automatically.

## PLACEMENT OF THE AIR PURIFIER

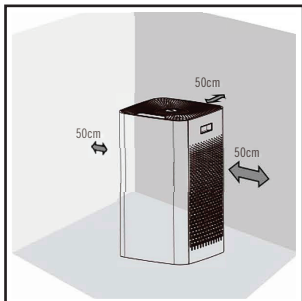

Do not obstruct air intake or clean air outlet.


To ensure enough ventilation, make sure there is a 20 inch or 50 cm distance between the air inlet and wall or nearby furniture.

## INSTALLING THE FILTER SET


All filters must be used together. Please disassemble filters according to the following instructions. Reinstall the filters accordingly.




1. Place the machine in a dry location and on a smooth and flat surface.

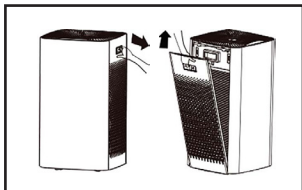

2. Press down on the handles on the sides to remove the side covers. After they open, lift the cover out from the bottom fixed grooves.

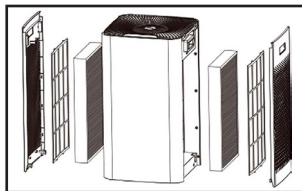


3. Do not disassemble the filters. Filters sets come in one piece for maximum efficiency.

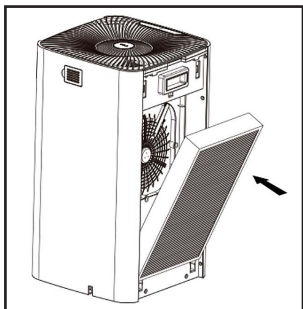

4. Remove any exterior packaging of the filter sets. Place filters back in the air purifiers after the packaging is removed.
5. To reinstall the side covers, align at the fixed grooves and insert the cover into the grooves. The side covers will snap back in automatically.

## DESCRIPTION OF CONTROL PANEL FUNCTIONS

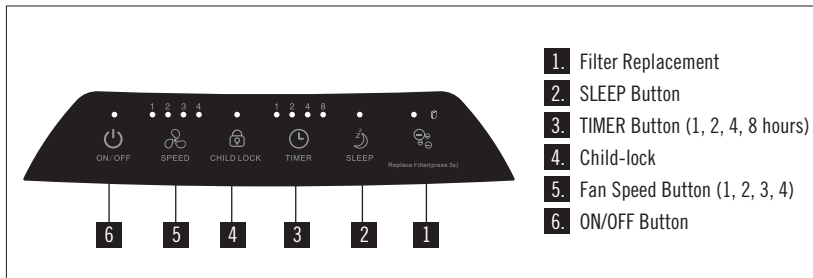

## HOW TO USE

This air purifier is used to remove airborne contaminants from the indoor air in a particular area which could be potentially harmful to breathe.

### PLUG IN

- After plugging it in, the air purifier will beep. Indicator lights will flash 1 time. Then, they will turn off.

### TURNING ON THE AIR PURIFIER

- Press the ON/OFF button. The unit will start on speed 1 with indicator light on.
- Press the ON/OFF button again to turn off the unit.

### MANUAL ADJUSTMENT OF FAN

- Press the SPEED button to choose air speed: 1, 2, 3, or 4.

### SLEEP MODE

- Press the sleep button to enter into sleep mode, all other indicator lights will turn off. The fan speed and noise level will change to the lowest setting.
- After 10 seconds, the sleep indicator light goes out as well.
- Press any key to exit sleep mode.

### TIMER

Press the timer button and choose hour options: 1, 2, 4, 8, or no timer.



## **FILTER REPLACEMENT BUTTON**

When the filter replacement indicator is on, user needs to replace the filter and press the button for 3 seconds to reset. Then, fan speed indicator light will stop flashing.

## **CHILD-LOCK BUTTON**


In this mode, none of the function keys can be used or changed (except the child lock function). To turn on the child lock, hold the button down for 3 to 5 seconds. To turn off the child lock function, hold the button down for 30 to 45 seconds.

# **CLEANING AND MAINTENANCE**

Please make sure to pull out the power plug before cleaning the unit. Do not immerse machine in water or any other liquid. Do not use abrasive, corrosive or flammable products to clean any parts of the unit. The unit uses composite filters, so filters cannot be washed.

## **CLEANING THE AIR PURIFIER**


Clean the air purifier regularly to prevent dust accumulation. Use soft and dry cloths to remove dust from the air purifier.

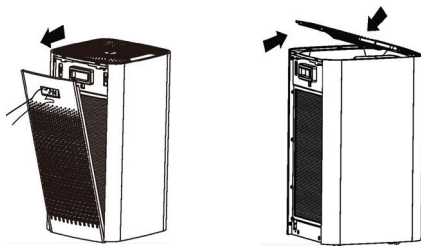


# FILTER REPLACEMENT

## LIGHT INDICATOR TO REPLACE THE FILTER\*

The indicator light will remind users when it is time to change your filter.

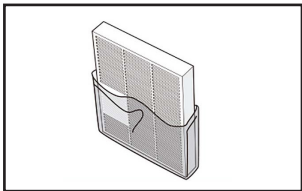

1. Remove all existing filters from the unit. Remove all packaging from new filter sets. Then, install the new filters into the unit in the same order as existing filters.

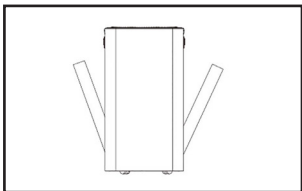

2. Install new filter sets in the unit. Reinstall side covers, as outlined earlier. Side covers will snap back in automatically.



3. When filter replacement is complete, plug in unit and turn on. Press and hold down the button for 3 seconds to reset the unit.

### ATTENTION



Turn off and pull out power plug before replacing the filters. If replacement filter indicator light flashes again after replacement, press and hold down the reset button at the side (as shown above) until indicator light resets itself.

\*You can order genuine Medify replacement filters at: [www.medifyair.com](http://www.medifyair.com)

## WARRANTY INFORMATION

If you have any additional questions, please contact customer service. All names and trademarks are property of Medify Air. Our company reserves the right to change the product at any time, without prior notice, and the company has no obligation to adjust any products supplied earlier. Please refer to the detailed warranty terms below. To register for the lifetime warranty, please fill out the attached form and mail it to:

### Medify Air

150 E. Palmetto Park Road, Suite 200  
Boca Raton, Florida 33432

Or complete the lifetime warranty registration available on our website (preferred method):

[www.medifyair.com](http://www.medifyair.com)

## LIFETIME WARRANTY

Medify guarantees your Medify Air Purifier to be free of defects in material or workmanship for a lifetime period, provided you have completed and returned your warranty registration to Medify Air within the first 30 days of purchase, and that the filters are replaced with original and genuine Medify Air replacement filters at least once every four to five (4-5) months or after 3,000 hours of use. Within the first 30 days, Medify Air will replace the defective unit at no charge to you and reimburse you for any shipping charges. After 30 days, Medify Air's obligation and liability under this Lifetime Warranty is dependent on your use of our genuine filters, purchased on our website or from our authorized resellers, which can be found on our website. Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 120v unit with a 120v power supply. You can break or ruin the circuit boards if you plug a 120v plug into a 220v power supply.

~~Our Lifetime Warranty requires registration to Medify Air within 30 days of purchase.~~

2. You change filters with genuine and original Medify Air replacement filters at least once every four to five (4-5) months or after 3,000 hours of use (whichever comes first).
3. You use a proper power supply based on voltage: 120V.
4. There is no evidence of tampering, mishandling, neglect, accidental damage, modification, and/or repair done to the Medify Air purifier by anyone other than authorized Medify Air service personnel.
5. Your air purifier is operated in accordance with the provided instructions.

This Lifetime Warranty is provided by:

### Medify Air

150 E. Palmetto Park Road, Suite 200  
Boca Raton, Florida 33432

[www.medifyair.com](http://www.medifyair.com)  
[info@medifyair.com](mailto:info@medifyair.com)  
(888) 258-1008

Please visit our website for  
details on efficacy test data:  
[medifyair.com/pages/reports](http://medifyair.com/pages/reports)