



MEDIFY AIR



MA-40 AIRPURIFIER

READ AND SAVE THESE INSTRUCTIONS
INSTRUCTION MANUAL AND WARRANTY INFORMATION
Lifetime warranty if replacing filters on time

MA-40/US
Rev: 04/28/23

IMPORTANT SAFETY INSTRUCTIONS:

IN ORDER TO AVOID ANY DAMAGE TO YOU, OTHERS OR PROPERTY, FOLLOW THE FOLLOWING SAFETY PRECAUTIONS:

IF THE POWER CORD OR UNIT DOES NOT WORK, CONTACT MEDIFY CUSTOMER SERVICE IMMEDIATELY.

READ ALL INSTRUCTIONS BEFORE USING.

WARNING — TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- DO NOT touch the power plug with wet hands.
- Turn off the power before cleaning the unit.
- DO NOT use the air purifier in rooms where fumigation or pesticide is being used.
- Keep the unit dry.
- DO NOT use air purifier in a room where oils or grease are being cooked with; that may clog the filters.
- Use ONLY a soft clean cloth. DO NOT use solvents like Benzene, Alcohol or any flammable cleaners to clean the air purifier.
- Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 120v unit with a 120v power supply. You can break or ruin the circuit boards if you plug a 120v plug into a 220v power supply.
- To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.
- BEFORE USING THIS PRODUCT, PLEASE MAKE SURE TO REMOVE THE PLASTIC COVERING FROM ALL FILTERS.
- Turn off the power immediately in case of any of the following:
 - Malfunction of any switch
 - Circuit failure
 - Abnormal heating of wires or plugs
 - Any other malfunction

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any type of hazard. This appliance can be used by children aged 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance of the unit shall not be made by children without supervision. Prior to cleaning or doing any type of maintenance, the appliance must be disconnected from the power supply.

SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

FILTER PURIFICATION

1. PRE FILTER

Removes hair, fibers, and large particles like dander.

2. TRUE HEPA H13 FILTER


The high-efficiency H13 TRUE HEPA filter is tested to removed 99.7% of particles down to 0.1 microns. This higher grade of HEPA filter easily catches pollen, dust mites, and other tiny airborne particles you can't see.

3. ACTIVATED CARBON FILTER

Substantial carbon filter with carbon pellets remove odors, and smoke.

4. IONIZER

Produces negative ions to neutralize positively charged particles such as dust, pollen, animal dander and other airborne positive particles.

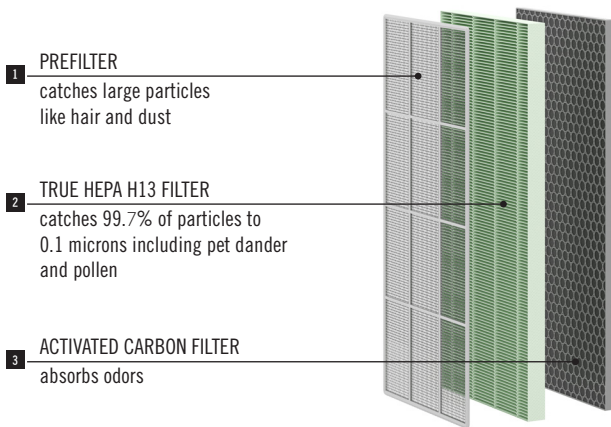

To purchase genuine Medify replacement filters, visit www.medifyair.com.


TECHNICAL DATA

- Voltage: 120 V AC 60 Hz
- Rated power: 68 W
- Noise level: <66 dB(A)
- Unit dimensions: 22"H x 9.9"W x 10.9"D
- Unit weight: 15.5 lbs.
- EPA Est. No.:99452-CHN-1

STANDARD COVERAGE

Up to 1,600 sf every 60 minutes, up to 840 sf every 30 minutes, 420 sq. ft every 15 minutes.


Clean Air Delivery Rate		
Smoke	Pollen	Dust
410 m ³ /h (241 CFM)	408 m ³ /h (240 CFM)	393 m ³ /h (231 CFM)

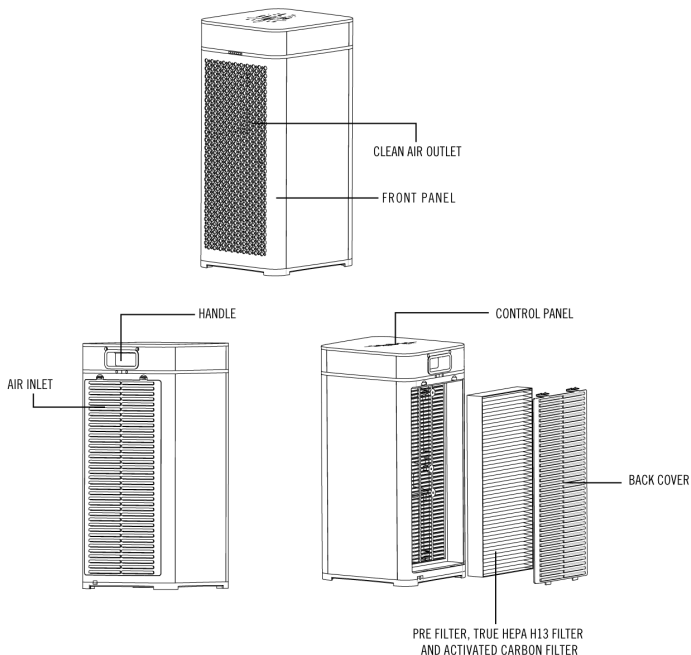


BEFORE USE

This air purifier is used to remove airborne contaminants from the indoor air in a particular area which could be potentially harmful to breathe.

OPENING AND REPLACING THE BACK COVER

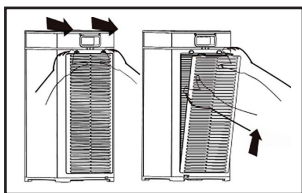


1. Press the tabs on the back cover and pull on the cover. Then lift the back cover and pull out slightly.

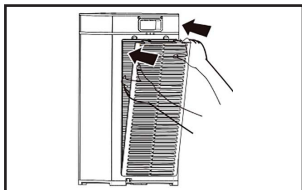

2. To reinstall the side covers, align the fixed slots and insert the covers into the slots. The covers will automatically snap back into place.

INSTALLING THE AIR PURIFIER

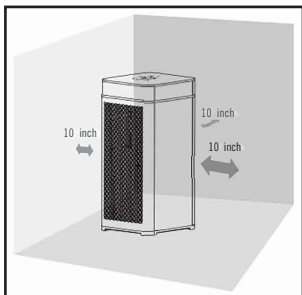


Do not obstruct the air intake or the clean air outlet. To ensure proper air circulation, leave at least 10" space between the back air intake and the wall or the furniture.

INSTALLING THE FILTER


The 3 stage Medify filter is a one-piece filter for higher performance. Remove the old filter by pulling on the small tab at top. When reinstalling the new filter, make sure to push it back in and make sure that it is affixed snugly for maximum performance.




1. Place the machine in a dry location and on a smooth and flat surface.

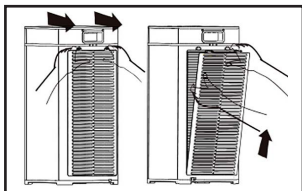


2. Press the top buttons in the back cover and pull the cover. Lift the back cover and pull out slightly.

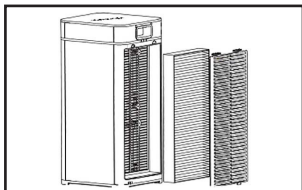


3. Remove the filter by pulling on the small tab at the top of filter.

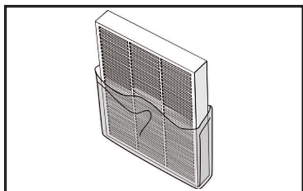

4. Remove any plastic packaging from the new filter before installing it in the air purifier.

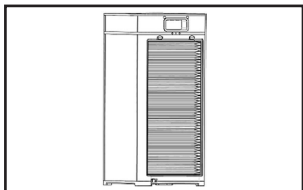

5. Place the new filter in the air purifier with the white side facing out towards you. The tab at the top of the filter should be facing you.

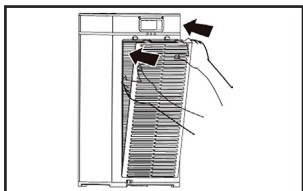


6. Replace the back cover.

ATTENTION



Remove all plastic packaging from the filter before installing it.
DO NOT run the air purifier if there is no filter installed.

CONTROL PANEL

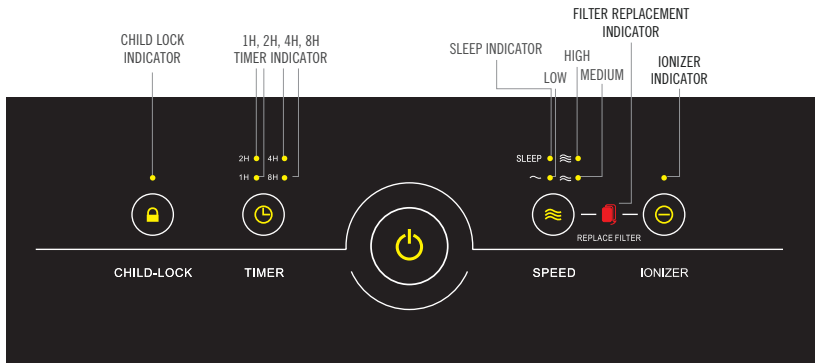



HOW TO USE

BEFORE TURNING THE UNIT ON

- Take the air purifier out of the box and remove the clear protective plastic bag.
- Place the air purifier on a firm, leveled surface.
- Plug the power cord into a standard AC outlet. After plugging it in, the air purifier will beep. All the indicator lights will flash 1 time, including the power light indicator. Then, the unit will enter standby mode.

POWER BUTTON AND FAN SPEED SETTINGS

- To turn the air purifier on, press the power  button.
- The unit will start working in low speed. Press the  button again so the machine stops and enters standby mode.
- This air purifier has 4 fan speed settings: low, medium, high and sleep mode. The higher the fan speed setting, the faster the air will be purified. To select or change fan speed, press the fan speed button until the desired setting is reached.

TIMER

Press the timer button and choose your preferred hour option: 1, 2, 4, 8 or no timer.

IONIZER MODE

Ionizer is an On/Off function. You can choose to leave it on or off at your discretion. When Ionizer is on, the indicator light will be lit.

CHILD-LOCK BUTTON

In this mode, none of the function keys can be used or changed (except the child lock function). To turn on the child lock, hold the button down for 3 to 5 seconds. To turn off the child lock function, hold the button down for 30 to 45 seconds.

CLEANING AND MAINTENANCE

Unplug the air purifier before cleaning it. Do not use too much water to clean the unit. Use a soft and wet cloth to clean the unit. Do not ever use any cleaners or chemicals on the air purifier.


CLEANING THE AIR PURIFIER

From time to time, if you see too much dust accumulated on the unit, wipe it with a clean dry cloth. Also, make sure that both the air intake and the vents are free from dust. **DO NOT** vacuum or try to wash the filter as it will clog it.


FILTER REPLACEMENT

LIGHT INDICATOR TO REPLACE THE FILTER


The indicator reminds the user when the filter needs to be replaced. The indicator will become lit in red when the filter needs to be replaced.

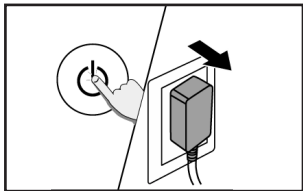


1. A red indicator light will show the user if the filters need to be replaced. Make sure to unplug the unit before changing the filter.

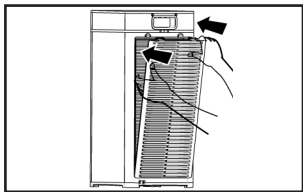


2. Press the top buttons on the back cover and pull the cover. Lift the back cover and pull out slightly.

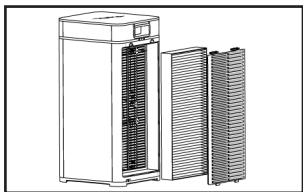


3. Remove the old filter from the unit by pulling on the tab at the top.

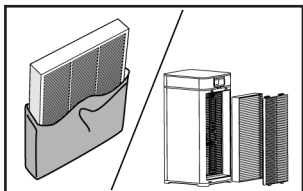

4. Remove any plastic packaging from the new filter before installing it in the air purifier. Place the new filter in the air purifier with the white side facing towards you.

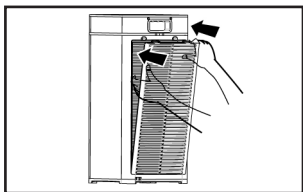

5. Replace the back cover.

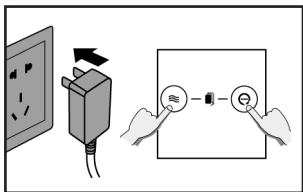

6. Resetting the Filter indicator Light:
Once the new filter has been installed and the unit is turned back on: Hold down the FAN SPEED button and the IONIZER button at the same time for 3-5 seconds. Then, the indicator light will go off and the timer will be reset for 3,000 hours.

WARRANTY INFORMATION

If you have any additional questions, please contact customer service. All names and trademarks are property of Medify Air. Our company reserves the right to change the product at any time, without prior notice, and the company has no obligation to adjust any products supplied earlier. Please refer to the detailed warranty terms below. To register for the lifetime warranty, please fill out the attached form and mail it to:

Medify Air

150 E. Palmetto Park Road, Suite 200
Boca Raton, Florida 33432

Or complete the lifetime warranty registration available on our website (preferred method):

www.medifyair.com

LIFETIME WARRANTY

Medify guarantees your Medify Air Purifier to be free of defects in material or workmanship for a lifetime period, provided you have completed and returned your warranty registration to Medify Air within the first 30 days of purchase, and that the filters are replaced with original and genuine Medify Air replacement filters at least once every four to five (4-5) months or after 3,000 hours of use. Within the first 30 days, Medify Air will replace the defective unit at no charge to you and reimburse you for any shipping charges. After 30 days, Medify Air's obligation and liability under this Lifetime Warranty is dependent on your use of our genuine filters, purchased on our website or from our authorized resellers, which can be found on our website. Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 120v unit with a 120v power supply. You can break or ruin the circuit boards if you plug a 120v plug into a 220v power supply.

~~On Your Lifetime Warranty, you must register to Medify Air within 30 days of purchase.~~

2. You change filters with genuine and original Medify Air replacement filters at least once every four to five (4-5) months or after 3,000 hours of use (whichever comes first).
3. You use a proper power supply based on voltage: 120V.
4. There is no evidence of tampering, mishandling, neglect, accidental damage, modification, and/or repair done to the Medify Air purifier by anyone other than authorized Medify Air service personnel.
5. Your air purifier is operated in accordance with the provided instructions.

This Lifetime Warranty is provided by:

Medify Air

150 E. Palmetto Park Road, Suite 200
Boca Raton, Florida 33432

www.medifyair.com
info@medifyair.com
(888) 258-1008

Please visit our website for
details on efficacy test data:
medifyair.com/pages/reports